



# Ancerre

DESIGNS


VTS-ELIZABETH-48

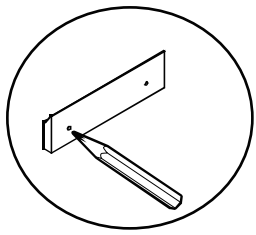


A

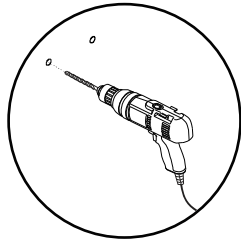


B

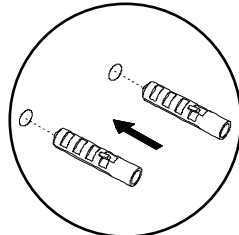


C

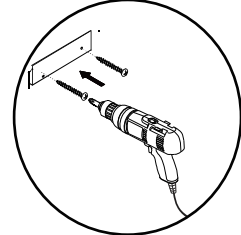


D

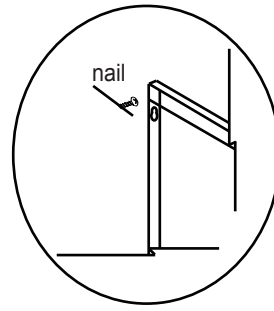


E

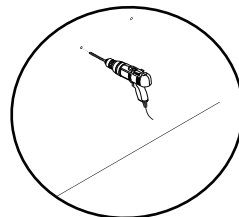


F

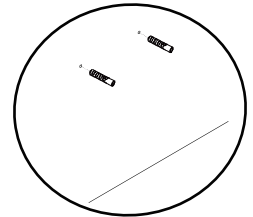


G\*

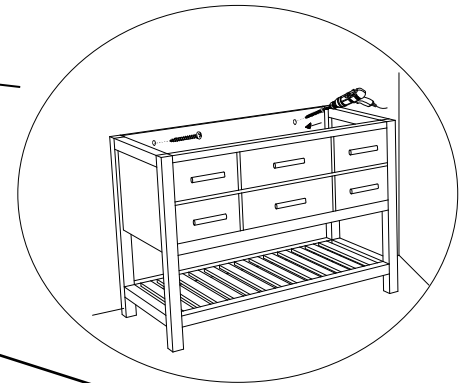

H

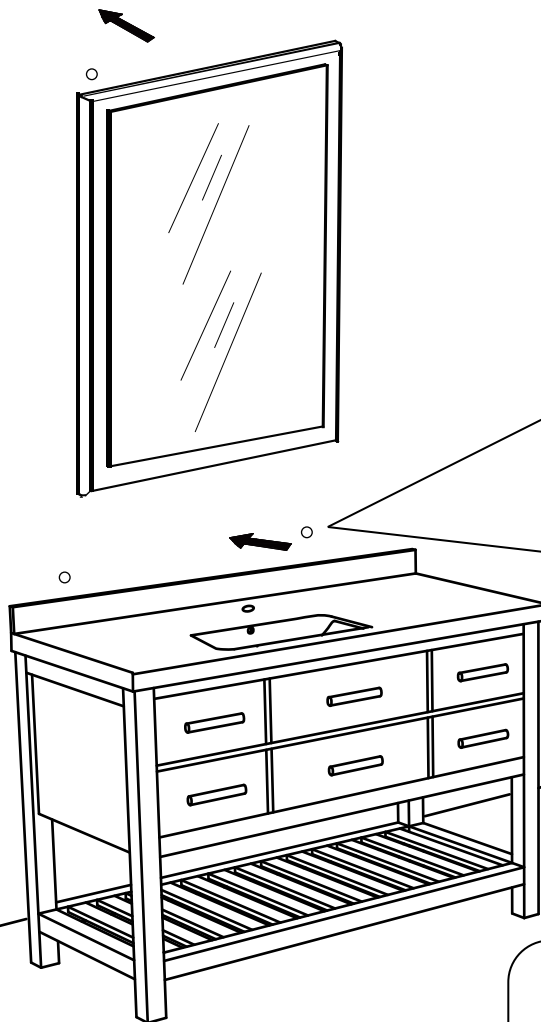

Adjustable leg leveler.  
Adjust for level.

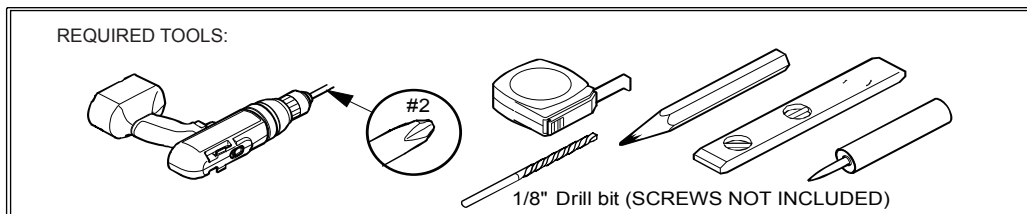


\*SECURE SCREW TO STUDS WHEN POSSIBLE


# Ancerre

D E S I G N S


VTS-ELIZABETH-60

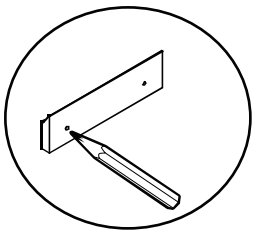


A

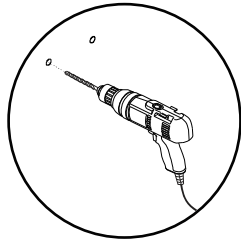


B

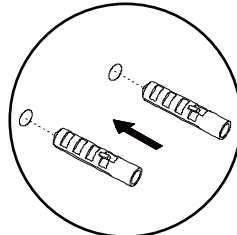


C

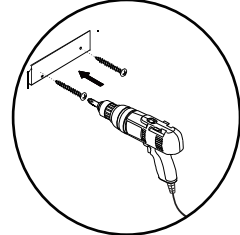


D

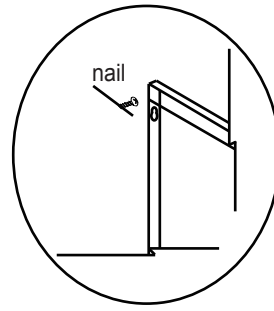




E

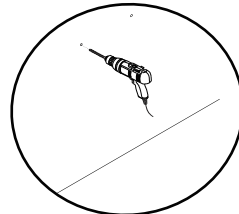


F

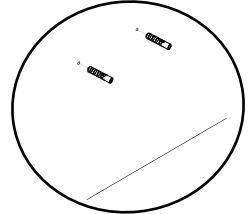

G\*

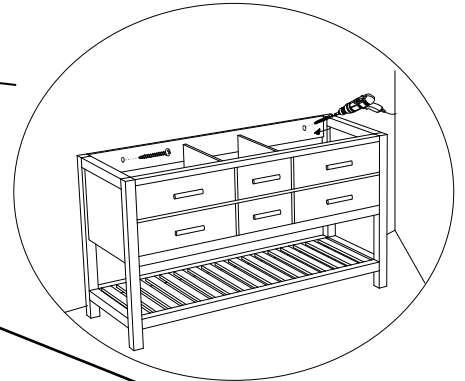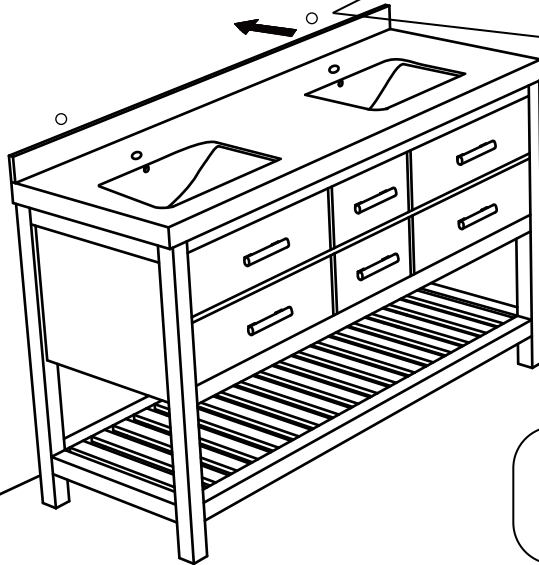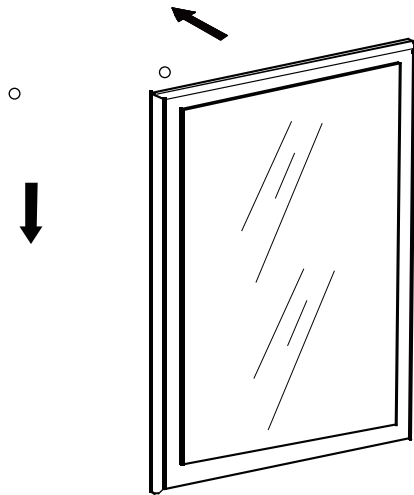

H

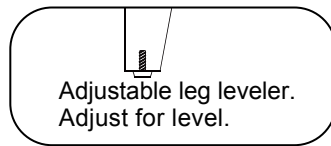

REQUIRED TOOLS:


1/8" Drill bit (SCREWS NOT INCLUDED)

\*SECURE SCREW TO STUDS WHEN POSSIBLE


# Ancerre

D E S I G N S


VTS-ELIZABETH-72

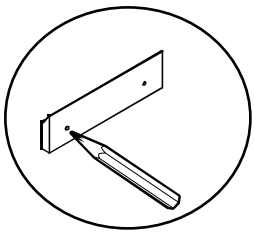


A

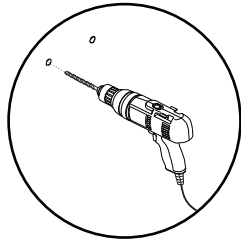


B

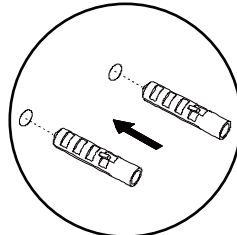


C

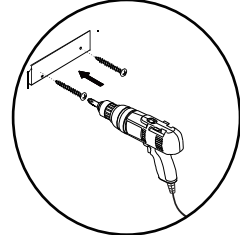


D

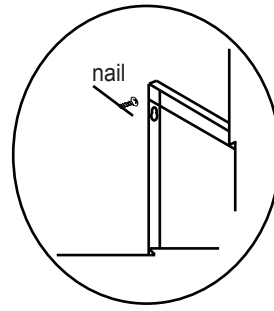




E

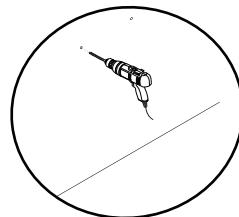



F

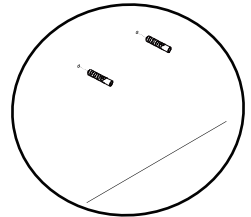

G\*

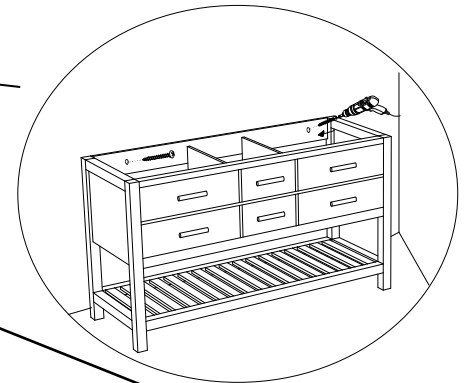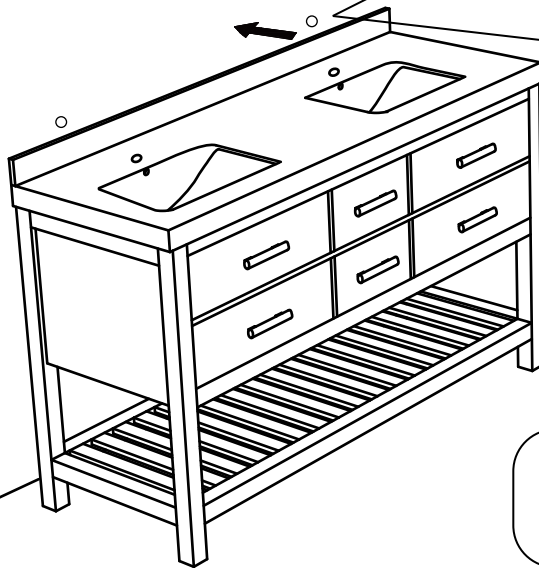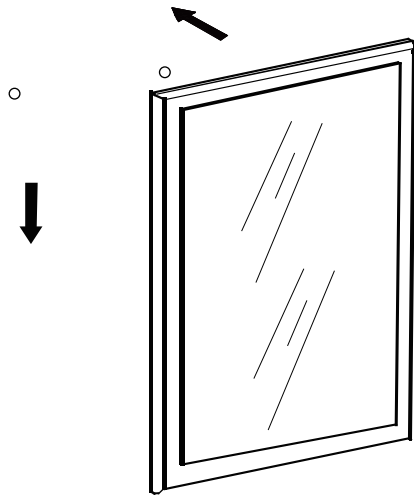

H

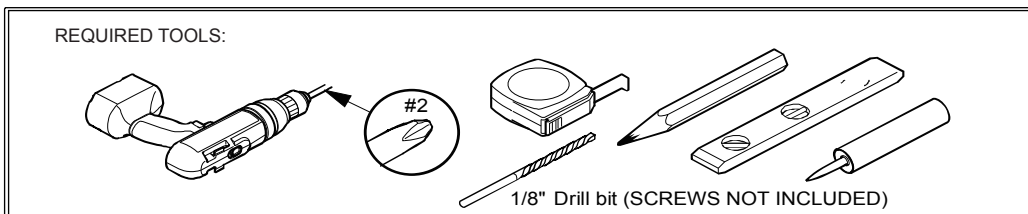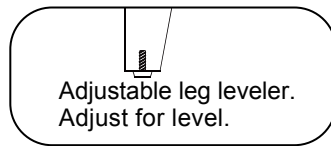

\*SECURE SCREW TO STUDS WHEN POSSIBLE