



Ancerre

DESIGNS


VTS-SHELTON-48

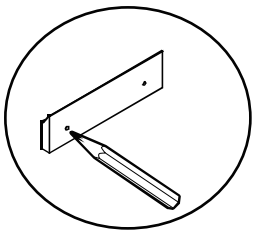


A

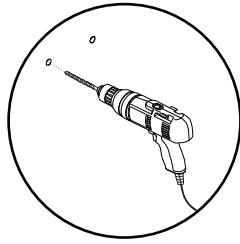



B

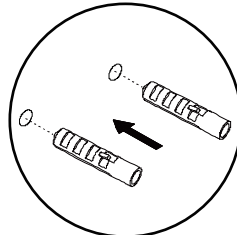


C

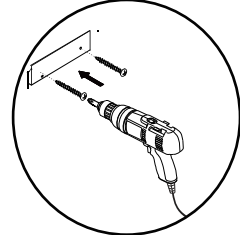


D

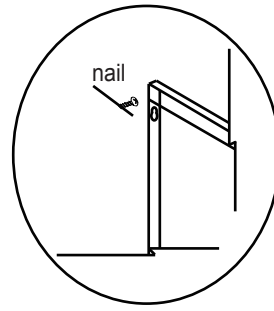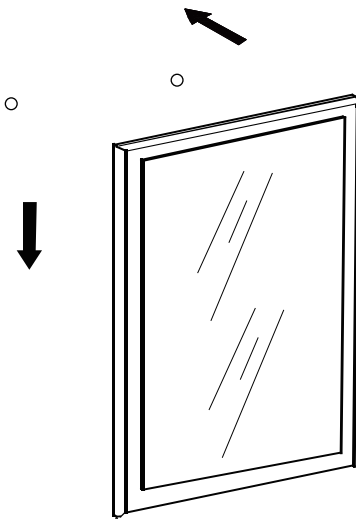


E

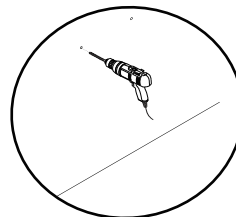

F

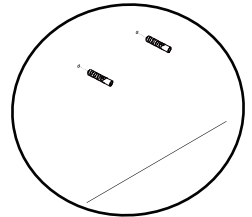

G*

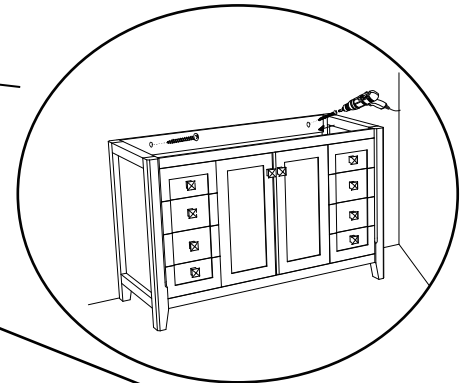

H

Adjustable leg leveler.
Adjust for level.

REQUIRED TOOLS:

#2


1/8" Drill bit (SCREWS NOT INCLUDED)

*SECURE SCREW TO STUDS WHEN POSSIBLE


Ancerre

DESIGNS


VTS-SHELTON-60

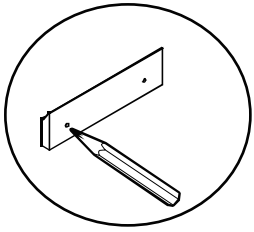


A

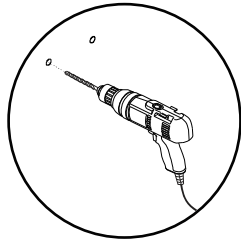


B

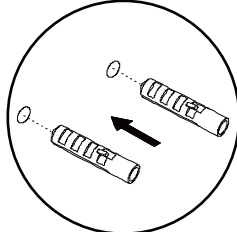


C

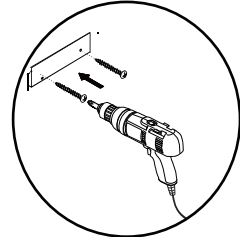


D

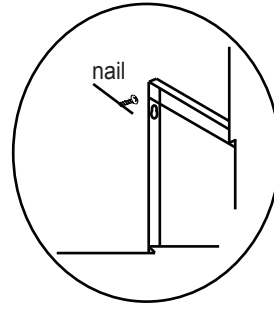




E

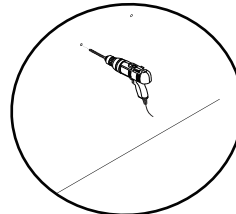

F

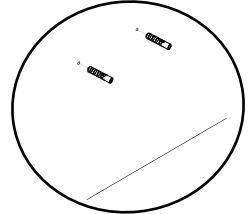

G*

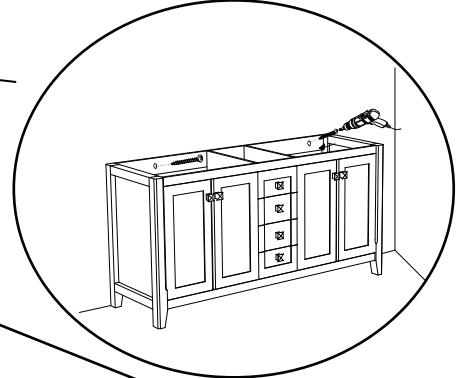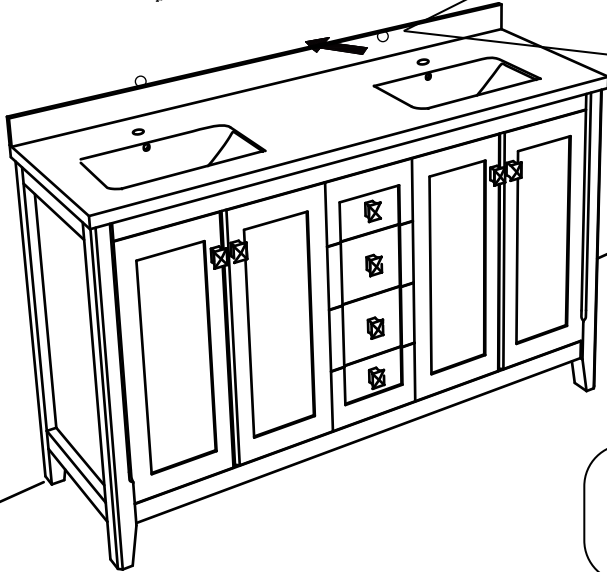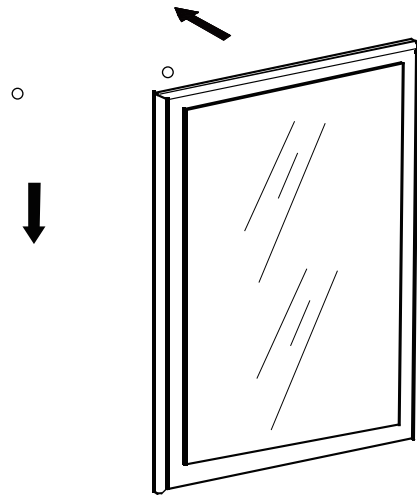

H

Adjustable leg leveler.
Adjust for level.

REQUIRED TOOLS:

#2

1/8" Drill bit (SCREWS NOT INCLUDED)

*SECURE SCREW TO STUDS WHEN POSSIBLE